

SVAB: REPLACING ROLL PART MOUNTING INSTRUCTION

Rev. A


Art. no: 113013

This is an instruction how to replace a defective roll. Follow the instructions to avoid damaging the joystick.

Associated to art. no: 995305

01

000002

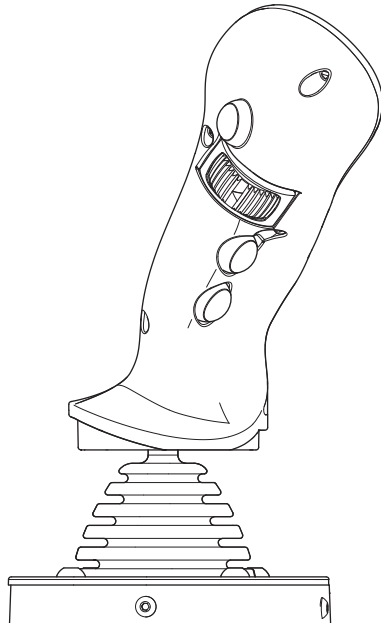


Lift the edge of the roller gently by using a thin tool. (ex. knife or screwdriver)

Remove the defective roller from the handle without damaging or scratching the surface.

02

000001

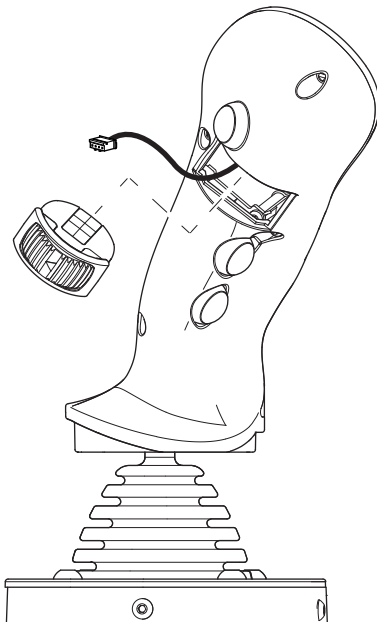

Disconnect the cable from the defective roller and connect it to the replacing part. Gently snap the roller back in place within the handle. Make sure that no wires get pinched on the inside.

Make sure that the roller has a consistent and smooth movement throughout its stroke and that it returns to center position when released.

